- + 77-ストステップガイドには、日本語、英語、中国語が掲載されています。
 There are Japanese, English and Chinese versions listed in First Step Guide.
 在初次操作指南中记载有日语、英语和中文。

取扱説明書(CD/DVD)は、日本語、英語、中国語が掲載されています。至 中国語は、日本語、英語どちらのたューからも検索できます。



タッチパネルティーチング CON-PT/PD/PG

ファーストステップガイド 第5版

このたびは、当社の製品をお買い上げ頂きまして、ありがとうございます。 安全のために、本ファーストステップガイドの他、同梱の安全ガイドおよび取扱説明書(CD/DVD)に従って、正 しくご使用ください。

このファーストステップガイドは、本製品専用に書かれたオリジナルの説明書です。

/↑ 警告:本装置の取扱いは、同梱の取扱説明書(CD/DVD)に従って行ってください。取扱説明書 (CD/DVD) は常に確認できるよう本コントローラが組込まれた装置の近傍に保管してくださ

取扱説明書が必要な場合、ファーストステップガイドまたは取扱説明書巻末に記載されている最 寄の営業所にご請求ください。

- この取扱説明書の全部または一部を無断で使用・複製することはできません。
- 本文中における会社名・商品名は、各社の商標または登録商標です。

製品の確認

本製品は、標準構成の場合、以下の部品で構成されています。

万が一、型式違いや不足のものがありましたら、お手数ですが、販売店または当社までご連絡ください。

_1. 構成品(オプンヨンを除く)				
番号	品 名	型 式	備 考	
1	本体	形式銘板の見方、型式の見方参照		
付属品				
2	タッチへ [°] ン	本体に内蔵		
3	ファーストステップ゜カ゛イト゛			
4	取扱説明書(CD/DVD)			
5	安全が介			

2. CD/	2. CD/DVDに収録されている本製品関連の取扱説明書				
番号	名 称	管理番号			
1	タッチパネルティーチング CON-PT, CON-PD, CON-PG 取扱説明書	MJ0227			
2	ERC2 コントローラ (PIO 専用) 一体型アクチュエータ取扱説明書	MJ0158			
3	ERC2 コントローラ (SIO 専用) 一体型アクチュエータ取扱説明書	MJ0159			
4	ERC3 コントローラ一体型アクチュエータ取扱説明書	MJ0297			
5	PCON-CA コントローラ取扱説明書	MJ0289			
6	PCON-C/CG/CF コントローラ取扱説明書	MJ0170			
7	PCON-CY コントローラ取扱説明書	MJ0156			
8	PCON-SE コントローラ取扱説明書	MJ0163			
9	PCON-PL/PO コントローラ取扱説明書	MJ0164			
10	ACON-C/CG コントローラ取扱説明書	MJ0176			
11	ACON-CY コントローラ取扱説明書	MJ0167			
12	ACON-SE コントローラ取扱説明書	MJ0171			
13	ACON-PL/PO コントローラ取扱説明書	MJ0166			
14	SCON-C コントローラ取扱説明書	MJ0161			
15	SCON-CA コントローラ取扱説明書	MJ0243			
16	ROBONET 取扱説明書	MJ0208			
17	ASEP/PSEP コントローラ取扱説明書	MJ0216			
18	PMEC/AMEC コントローラ取扱説明書	MJ0245			

18 PMEC/AMEC コントローラ取扱説明書	MJ0245
3. 型式銘板の見方 型式 MODEL CON-PT シリアル番号 SERIAL No.900109940 A1 MADE IN JAPAN	
CON-PD: デッド マンスイッチ付きタイフ* ENG : 英 CON-PG: 安全カテゴリ 4 対応タイフ* JCH : 日 CHJ : 中 ECH : 英 CHE : 中 〈表示色〉	本語表示(英語表示切替可)語表示(日本語表示切替可)本語表示(中国語表示切替可) 国語表示(日本語表示切替可) 国語表示(日本語表示切替可) 語表示(中国語表示切替可) 国語表示(英語表示切替可)

サポート機種

サポート機種一覧			
コントローラ機種名			
ERC2 注 1	RACON		
ERC3	RPCON		
ACON	ASEP		
PCON	PSEP		
PCON-CA	DSEP		
SCON-C	AMEC		
SCON-CA	PMEC		

注1 ERC2 本体のカバーの左側面(後ろから見て)に貼ってあるシールをご確認ください。 以下の基板種別に限りサポートしています。

シールの表記	
基板種別	
NP T1 4904	
PN T1 4904	

ERC2 の SE タイプは、SIO 変換器を中継して接続することができます。


基本仕様

仕様一覧		
項目	仕 様	
表示	モノクロ液晶タイプ	
消費電力	2.4W 以下(100mA 以下)	
使用周囲温度、湿度	温度 0~50°C 湿度 20~85%RH (ただし結露なきこと)	
保存周囲温度、湿度	温度-20~60°C 湿度 10~85%RH (ただし結露なきこと)	
耐振性	(試験条件) 10~55Hz	
川	複振幅 0.75mm X、Y、Z 方向 10 分間	
耐衝撃性	(試験条件) 9.8m/s ² 以上 X、Y、Z 方向 4 回	
耐環境性	IP40 相当	
寸法	180mm (縦) ×132mm (横) ×92.1mm (奥行き)	
質量	約 750g (ケーブル 5m を含む)	
ケープ・ル長	5m (標準)	
付属品	タッチへ [°] ン	

表示切替え機能


型式	表示言語(出荷時)	切替え可能言語
CON-PT-M	日本語	英語
CON-PT-M-JCH	日本語	中国語


外形寸法図

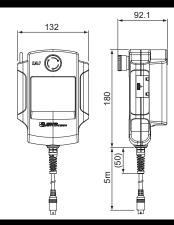


CON 系コントローラ操作メニュー


操作	≯ =⊒− 1	サフ゛メニュー	操作・運転画面
入出力 I/O、速度 などの状態表示	₹=\$		入出カ I/O、 速度などデータ表示 を
ボジションデーサの表示 編集	ボジション編集		ハンテンス情報 ハンフード 設定 ボジジョンデーター覧表示 ボジジョンデータ表示 (7ボジション同時表示) ボジジョンアーク表示 (7ボジション同時表示) ボジジョンアーク表示 (7ボジション・アル画面
			位置取り込み操作 ↓ 位置取り込み操作 ↓ 位置取り込み操作 ↓ 「ジョケ 操作画面
パラメータの表示、 編集	パラメータ編集		5119 (出荷時) (8 パラメーウ間時表示) (注 1) パ 27-ド設定 パラシーウ編集画面 (注 1) パ 27-ド設定 パラシーウ編集を行う場
軸移動の動作テスト	試運転	試運転メニュー ジョグ・インチング	y 3 が 操作 y 3 が 操作 y 3 が 操作 v 3 が 操作画面 v 3 が 操作画面 v 3 y 3 が 操作画面 x y y 3 y No.指定移動 x y y 3 y No.指定移動
PIO 信号の入出力 表示、出力信号の 強制出力		★・ジ・ション移動 数値指定移動	ボジッ2〉No.指定移動操作画面 位置(数値)指定移動操作画面) 位置(数値)指定移動操作画面 PIO 信号の入出力表示、出力信号の強制出力(V1.20 以降) ■ I/O テスト画面

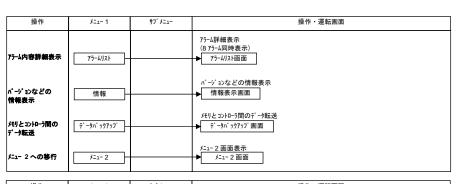

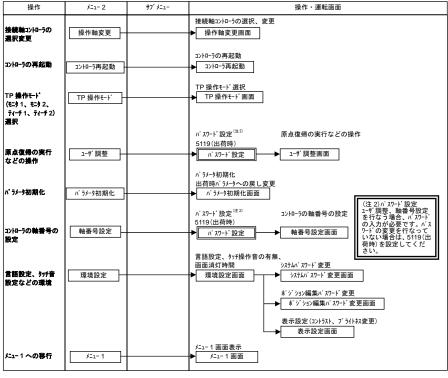


SEP 系コントローラ操作メニュー

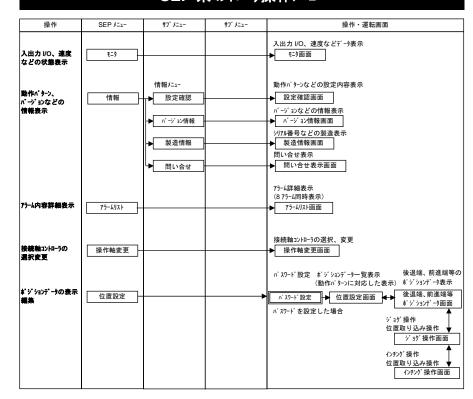

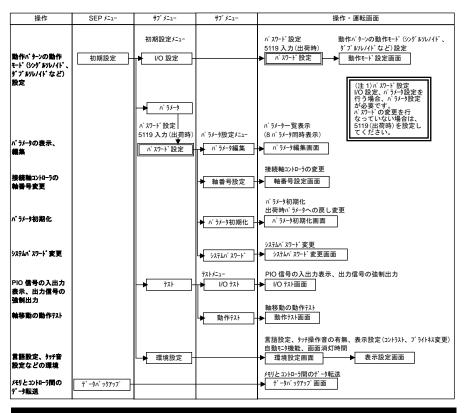

MEC 系コントローラ操作メニュー

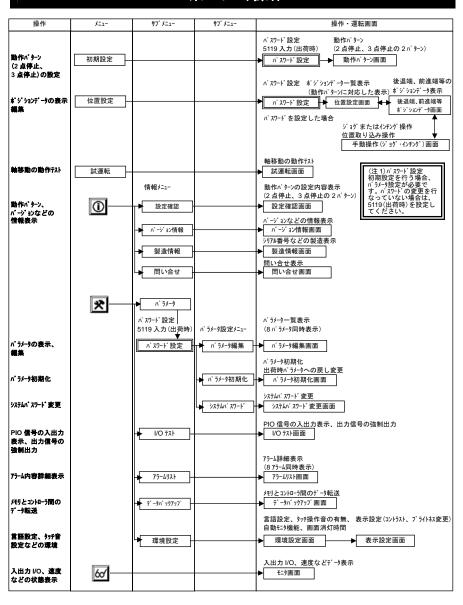

異常時の処置

ー タッチパネルティーチングで検出する主なエラーです。その他のエラーについては、本体の取扱説明書(CD/DVD 取説)をご確

各コントローラのエラーについては、各コントローラの取扱説明書(CD/DVD 取説)をご確認ください。

コート゛	エラー内容	原因と対策
308	レスポンスタイムアウトエラー コントローラからレスポンスが返ってきません。	原因: コントローラ接続ケーブルが断線しています。 対策:接続ケーブルの配線や断線を確認してください。 原因: /イズなどによる一時的な異常です。 対策: コントローラの電源を再投入してください。
30D	例外レスポンス受信エラー コントローラから異常なレスポンスが返ってきます。	原因:/イズなどによる一時的な異常です。 対策:頻発するようであればケーブル、電源装置の/イズ 対策等を確認してください。
**0002	NOT ##° - FIF-	原因: 画面データのバージョンが古いことが考えられます。 対策: バージョンを確認してください。
**00FF	9イムアップエラー コントローラからレスポンスが返ってきません。	原因: コントローラ接続ケーブルが断線しています。 対策:接続ケーブルの配線や断線を確認してください。 原因: /イズなどによる一時的な異常です。 対策: コントローラの電源を再投入してください。

There are Japanese, English and Chinese versions listed in Operation

Manual (CD/DVD). Chinese can be searched from both Japanese menutation and English menu.



Touch Panel Teaching CON-PT/PD/PG First Step Guide Fifth Edition

Thank you for purchasing our product.

Make sure to read the Safety Guide and detailed Instruction Manual (CD/DVD) included with the product in addition to this First Step Guide to ensure correct use.

This Instruction Manual is original.

Warning: Operation of this equipment requires detailed installation and operation instructions which are provided on the CD/DVD Manual included in the box this device was packaged in. It should be retained with this device at all times.

A hard copy of the Manual can be requested by contacting your nearest IAI Sales Office listed at the back cover of the Instruction Manual or on the First Step Guide.

- Using or copying all or part of this Instruction Manual without permission is prohibited.
- The company names, names of products and trademarks of each company shown in the sentences are registered trademarks

Product Check

This product is comprised of the following parts if it is of standard configuration.

If you find any fault in the contained model or any missing parts, contact us or our distributor.


1. Parts (The option is excluded.)

No.	Part Name	Model	Remarks
1		Refer to "How to read the model plate", "How to read the model No."	
Access	ories		
2	Touch Pen	Built in the Main Body	
3	First Step Guide		
4	Operation Manual (CD/DVD)		
5	Safety Guide		

2. Operation manuals related to this product, which are contained in the CD/DVD.

No.	Name	Manual No.
1	Touch panel teaching CON-PT, CON-PD, CON-PG Operation Manual	ME0227
2	Operation Manual for the actuator with integrated ERC2 controller <pio type=""></pio>	ME0158
3	Operation Manual for the actuator with integrated ERC2 controller <sio type=""></sio>	ME0159
4	Operation Manual for the actuator with integrated ERC3 controller	ME0297
5	PCON-CA Controller Operation Manual	ME0289
6	PCON-C/CG/CF Controller Operation Manual	ME0170
7	PCON-CY Controller Operation Manual	ME0156
8	PCON-SE Controller Operation Manual	ME0163
9	PCON-PL/PO Controller Operation Manual	ME0164
10	ACON-C/CG Controller Operation Manual	ME0176
11	ACON-CY Controller Operation Manual	ME0167
12	ACON-SE Controller Operation Manual	ME0171
13	ACON-PL/PO Controller Operation Manual	ME0166
14	SCON-C Controller Operation Manual	ME0161
15	SCON-CA Controller Operation Manual	ME0243
16	ROBONET Operation Manual	ME0208
17	ASEP/PSEP Controller Operation Manual	ME0216
18	PMEC/AMEC Controller Operation Manual	ME0245

3. How to read the model plate

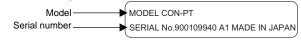

4. How to read the model No.

CON-PT-M-ENG

<Model>
CON-PT
CON-PD
CON-PD
CON-PG
: Safety Category 4 Switch Type Not specified : Screens are displayed in Japanese 1 Screens are displayed in Japanese.
(Display can be changed to English)
: Screens are displayed in English.
(Display can be changed to Japanese)
: Screens are displayed in Japanese.
(Display can be changed to Chinese)
: Screens are displayed in Chinese.
(Clisplay can be changed to In Japanese. ENG <Display Color>
M: Monochrome display (3 colors for backlight) (Display can be changed to Japanese) ECH Screens are displayed in English. (Display can be changed to Chinese)

Supported Models

List of Support Models

ziot di Gapport inidadio				
Controller Model No.				
ERC2 Note1	RACON			
ERC3	RPCON			
ACON	ASEP			
PCON	PSEP			
PCON-CA	DSEP			
SCON-C	AMEC			
SCON-CA	PMEC			

Note1 Check the sticker attached on the left surface (from the back view) of the cover of ERC2 main unit.

The support is available only for the types of PCB stated below

Note on the Label

PCB types	
NP T1 4904	
PN T1 4904	

Controllers can be connected with a relay of SIO convertor to SE type of ERC2.


Basic Specifications

Item	Specification	
Indication	Monochrome LCD type	
Power Demand	2.4W or less(100mA or less)	
Ambient air temperature, humidity	Temperature 0 to 50°C Humidity 20 to 85%RH (There should be no dew condensation).	
Ambient storage temperature, humidity	Temperature -20 to 60°C Humidity 10 to 85%RH (There should be no dew condensation).	
Vibration resistance	(Test Condition) 10 to 55Hz Duplex Amplitude 0.75mm X,Y,Z Direction for 10minutes	
Impact Resistance	(Test Condition) 9.8m/s ² or more X,Y,Z Direction Four Times	
Environment Resistance	IP40 or equivalent	
Dimensions	180mm (L) × 132mm (W) × 92.1mm (D)	
Mass	Approx. 750g (Including the 5m cable)	
Cable length	5m (Standard)	
Accessories	Touch pen	


Language Change


Model	Displayed Language (at Delivery)	Available Language		
CON-PT-M-ENG	English	Japanese		
CON-PT-M-ECH	English	Chinese		

External Dimensions

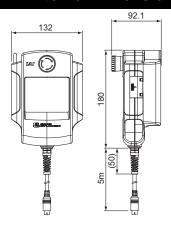



Operation Menu for CON Related Controllers

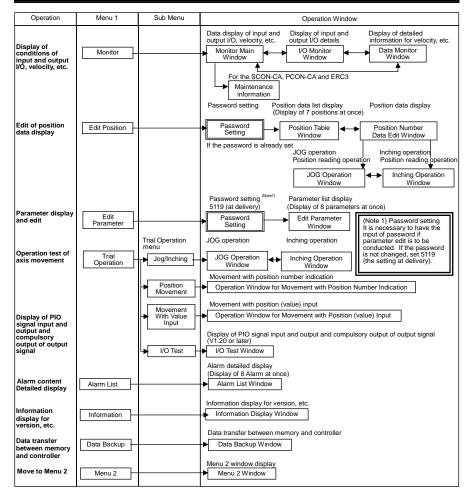

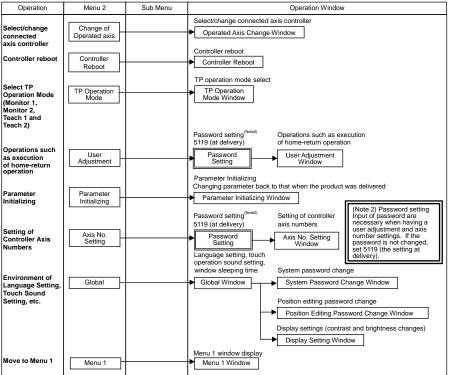

Operation Menu for SEP Related Controllers

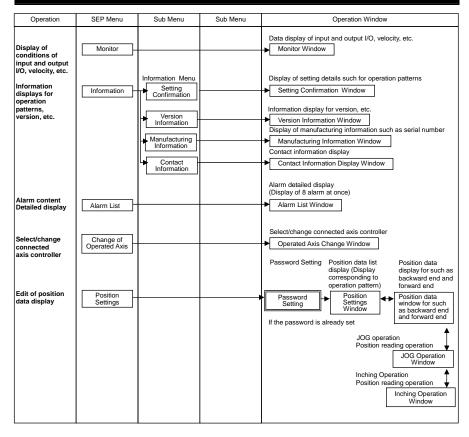

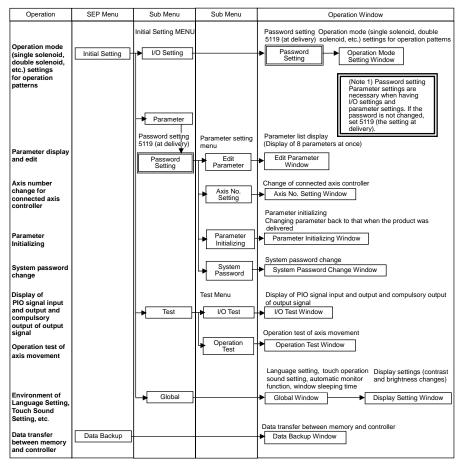

Operation Menu for MEC Related Controllers

Operation	Menu	Sub Menu	Sub Menu	Operation Window
				Password setting Operation Pattern 5119 (at delivery) (Two patterns, 2-point stop and 3-point stop)
Operation pattern (2-point stop, 3-point stop)	Initial Setting			Password Setting Operation Pattern Window
setting				Position data list Display (Display display for such as corresponding to backward end and
Edit of position	Position Settings			Password setting operation pattern) forward end operation pattern forward end Setting Position data Password Setting Position Atta Settings Window for such
data display	Settings			Window as backward end and forward end and forward end
				Jog or Inching Operation Position reading operation Manual Operation (Jog/Inching) Window
Operation test of axis movement	Test Run			Operation test of axis movement Test Run Window
Information		Information Menu		Display of setting details for operation pattern (Two patterns, 2-point stop and 3-point stop)
displays for operation	<u> </u>	Setting Confirmation		Setting Confirmation Window
patterns, version, etc.		Version Information		Information display for version, etc. Version Information Window
		Manufacturing		Display of manufacturing information such as serial number Manufacturing Information Window
		Information		Contact information display (Note 1) Password setting
		Contact Information - Display		Contact Information Display Window It is necessary to have the parameter settings if Initial Setting is to be conducted. If the
	*	Parameter		conducted. If the password is not changed, set 5119 (the setting at delivery).
		Password setting 5119 (at delivery)	Parameter setting menu	Parameter list display (Display of 8 parameters at once)
Parameter display and edit		Password Setting	Edit Paramete	Edit Parameter Window
Parameter				Parameter Initializing Changing parameter back to that when the product was delivered
Initializing			Parameter Initializing	Parameter Initializing Window System password change
System password change			System Password	System Password Change Window
				Display of PIO signal input and output and compulsory output of output signal
Display of PIO signal input and output and compulsory output of output		I/O Test		I/O Test Window
signal Alarm content		→ Alarm List		Alarm detailed display (Display of 8 alarm at once) Alarm List Window
detailed display Data transfer				Data transfer between memory and controller
between memory and controller		Data Backup		Data Backup Window Language setting, touch operation sound setting, brightness changes) Display settings (contrast and brightness changes)
Environment of Language Setting, Touch Sound Setting, etc.		Global		automatic monitor function, window sleeping time Global Window Display Setting Window Display Setting Window
Display of conditions of input and output I/O, velocity	66/			Data display of input and output I/O, velocity, etc. Monitor Window

Treatment in an emergency

Listed below are the main error codes detected often in the touch panel teaching. For the other error codes, please refer to Operation Manual (CD/DVD manual) enclosed with the main unit.

For the error codes specialized for each controller, please refer to Operation Manual (CD/DVD manual) provided with each controller.

Code	Error Description	Cause and Treatment
308	Response Timeout Error No response is returned from the controller.	Cause : A wire breakage is caused in the controller connection cable. Treatment : Check the wiring for or wire breakage in the connection cable. Cause : It is temporary error due to noise. Treatment : Re-input the power to the controller.
30D	Abnormal Response Receive Error An abnormal response is returned from the controller.	Cause : It is temporary error due to noise. Treatment : If it is caused frequently, check the noise protection measure, etc., in the power unit.
**0002	Not Supported Error	Cause : It is considered that the display data version is old. Treatment : Check the version.
**00FF	Time-up Error No response is returned from the controller.	Cause : A wire breakage is caused in the controller connection cable. Treatment : Check the wiring for or wire breakage in the connection cable. Cause : It is temporary error due to noise. Treatment : Re-input the power to the controller.

使用说明书(CD/DVD)登载有日文、英文、中文。



触摸屏示教器 CON-PT/PD/PG 初次操作指南 第5版

衷心感谢您选购本公司产品! 为确保安全使用、在使用之前请务必仔细阅读随本初次操作指南另附的安全指南以及使用说明书(CD/DVD) 本初次操作指南是本产品专用的原版说明书。

关于本装置的操作、请遵照随附的使用说明书(CD/DVD)中记载的安装及操作指示实施。 为确保随时可确认、请将在组装本控制器的装置旁存放使用说明书(CD/DVD)。 如需使用说明书、请向初次操作指南或使用说明书末尾所载的最近的营业所索取。

•未经允许、不得擅自使用或复制本说明书的全部或部分内容。

•正文中的公司名称、产品名称均为各公司的商标或注册商标

产品确认

- 本产品的标准配置由以下零件构成。
- 若发现型号错误或缺件、烦请与经销商或本公司联系。

1. 构成品(选件除外)

	·· 15%H (211%)							
编号	品 名	型 号	备注					
1	主体	参照型号铭牌说明、型号说明						
附件								
2	触摸笔	机体内置						
3	初次操作指南							
4	使用说明书(CD/DVD)							
5	安全指南							

2. CD/DVD 中收录的本产品相关使用说明书

编号	名 称	管理编号				
1	触摸屏示教器 CON-PT, CON-PD, CON-PG 使用说明书	MC0227				
2	ERC2 控制器 (PIO 专用) 一体型驱动轴使用说明书	MC0158				
3	ERC2 控制器 (SIO 专用) 一体型驱动轴使用说明书	MC0159				
4	ERC3 控制器一体型驱动轴使用说明书	MC0297				
5	PCON-CA 控制器使用说明书	MC0289				
6	PCON-/CCG/CF 控制器使用说明书	MC0170				
7	PCON-CY 控制器使用说明书	MC0156				
8	PCON-SE 控制器使用说明书	MC0163				
9	PCON-PL/PO 控制器使用说明书	MC0164				
10	ACON-C/CG 控制器使用说明书	MC0176				
11	ACON-CY 控制器使用说明书	MC0167				
12	ACON-SE 控制器使用说明书	MC0171				
13	ACON-PL/PO 控制器使用说明书	MC0166				
14	SCON-C 控制器使用说明书	MC0161				
15	SCON-CA 控制器使用说明书	MC0243				
16	ROBONET 使用说明书	MC0208				
17	ASEP/PSEP 控制器使用说明书	MC0216				
18	PMEC/AMEC 控制器使用说明书	MC0245				

3. 型号铭牌说明

MODEL CON-PT 序列号— SERIAL No.900109940 A1 MADE IN JAPAN

4. 型号解说

CON-PT-M-ENG

〈型 号〉 CON-PT : 标准型 日语显示 英语显示 日语显示(可切换中文显示) CON-PD : 带安全开关型 中文显示(可切换日语显示) 英语显示(可切换中文显示) 中文显示(可切换英文显示) CON-PG : 安全类别 4 对应开关 M: 黑白液晶(3色背光灯)

支持机型

又持机型一见				
控制器机型名称				
ERC2*1	RACON			
ERC3	RPCON			
ACON	ASEP			
PCON	PSEP			
PCON-CA	DSEP			
SCON-C	AMEC			

※1 关于对 ERC2 控制器的支持情况、请确认盖板左侧面(从后看)贴的标签 支持以下基片种类。

SCON-CA




ERC2 的 SE 型可以中继 SIO 转换器进行连接。

基本规格


	规格一览					
项 目		规格				
显示	黑	白液晶型				
耗电	2.4W 以下	(100mA 以下)				
使用环境温度与湿度	温度 0~50℃湿度	₹20~85%RH (无凝露)				
保存环境温度与湿度	温度-20~60℃湿原	度 10~85%RH (无凝露)				
抗振性		(测试条件)10~55Hz 双振幅 0.75mm X、Y、Z 方向 10 分钟				
抗冲击性	(测试条件) 9.8m/s² 以上 X、Y、Z 方向 4 次					
耐环境性	相当于 IP40 标准					
尺寸	180mm (高)×132r	mm (长) ×92.1mm (宽)				
重量	约 750 克	约 750 克 (含 5 米电缆)				
电缆长度	5 3	K (标准)				
附件	1	触摸笔				
显示切换功能						
型号	显示语言(出厂时)	可切换语言				
CON-PT-M-CHJ	中文	日语				
CON-PT-M-CHE	中文	英语				

外形尺寸图

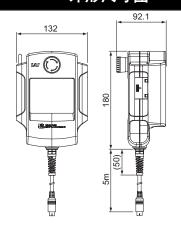


CON 系列控制器

操作	菜单 1	子菜单	操作及运行画面
		1111	输入输出 I/O、输入输出 I/O 详情显示 速度等详细数据显示 速度等数据显示
輸入輸出 I/O、速度 等状态显示	监控		上 监控主画面 ← I/O 监控画面 ◆ 数据监控画面
			为 SCON-CA、PCON-CA、ERC3 时 维护信息
			密码输入 位置数据一览显示 位置数据显示 (7 个位置栏同时显示)
位置数据的显示 编辑	位置编辑		密码输入 位置表画面
			已设定密码时 JOG 操作 微调操作 位置导入操作 ↓ JOG 操作画面 ◆ 微调操作画面
			密码输入 ^(注 1) 参数一览显示 5119(出厂时) (8 条参数栏同时显示)
参数的显示、 编辑	参数编辑		参数编辑画面 (注 1)密码输入 进行参数编辑时、必须
轴移动的动作测试	试运行	试运行菜单 → JOG/微调	JOG 操作 微调操作 微测操作 数调操作画面 ▼→ 微调操作画面 、
		→ 位置移动	指定位置编号移动 掛定位置编号移动操作画面
		数值指定移动	指定位置(数值)移动 → 指定位置(数值)移动操作画面
PIO 信号的输入输出 显示、输出信号的 强制输出		1/0 测试	PIO信号的输入输出显示、输出信号的强制输出(V1.20以后) ▶ I/O测试画面
报警内容详情显示	报警列表		报警详情显示 (8条报警同时显示) → 报警列表画面
版本等信息显示	信息		版本等信息显示
存储器与控制器 之间的数据传送	数据备份		存储器与控制器之间的数据传送 → 数据备份画面
切換至菜单 2	菜单2		薬单2画面显示 薬单2画面

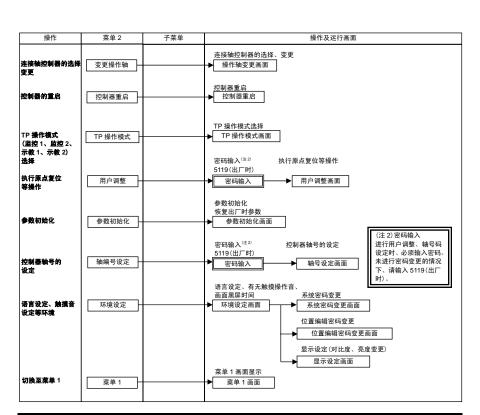


SEP 系列控制器

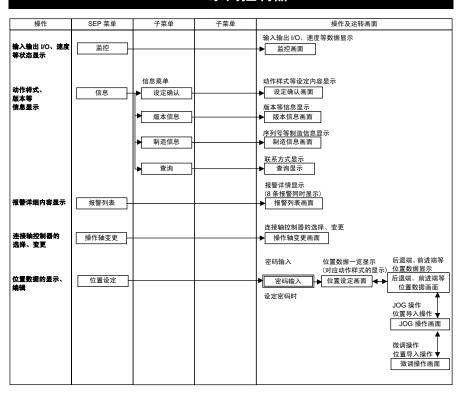



MEC 系列控制器

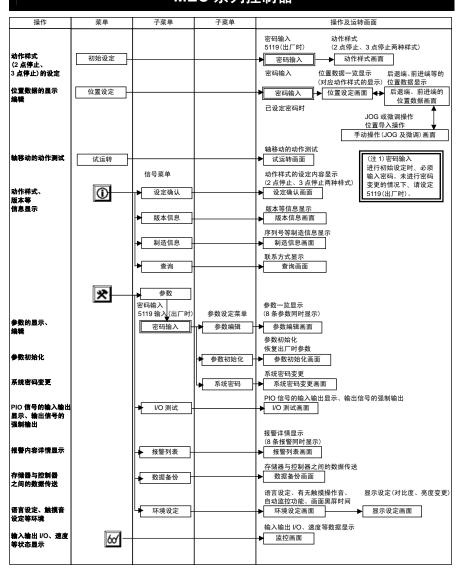

异常时的处理

以下列出通过触摸屏示教器检测出的主要错误。关于其他错误、请确认主机的使用说明书(使用说明书 CD/DVD)。关于各控制器的错误、请确认各控制器的使用说明书(使用说明书 CD/DVD)。

代码	错误内容	原因及对策
308	响应超时错误	原因:控制器连接电缆断线。
	没有从控制器返回响应。	对策: 请确认连接电缆的接线以及是否断线。
		原因: 因噪声干扰等引起的暂时性异常。
		对策:请将控制器电源断开后重新接通。
30D	例外响应接收错误	原因: 因噪声干扰等引起的暂时性异常。
	从控制器返回了异常的响应。	对策: 如果频繁发生、请确认电缆、电源装置的干扰对
		策等。
**0002	不支持错误	原因: 画面数据的版本可能太旧。
		对策:请确认参数。
**00FF	超时错误	原因:控制器连接电缆断线。
	没有从控制器返回响应。	对策:请确认连接电缆的接线以及是否断线。
		原因: 因噪声干扰等引起的暂时性异常。
		对策:请将控制器电源断开后重新接通。

株式会社アイエイアイ

本社・工場	₹424-0103	静岡県静岡市清水区尾羽 577-1	TEL	054-364-5105	FAX	054-364-2589
東京営業所	〒105-0014	東京都港区芝 3-24-7 芝エクセージビルディング 4F	TEL	03-5419-1601	FAX	03-3455-5707
大阪営業所	〒530-0002	大阪市北区曽根崎新地 2-5-3 堂島 TSS ビル 4F	TEL	06-6457-1171	FAX	06-6457-1185
名古屋営業所	∓460-0008	名古屋市中区栄 5-28-12 名古屋若宮ビル 8F	TEL	052-269-2931	FAX	052-269-2933
盛岡営業所	〒020-0062	岩手県盛岡市長田町 6-7 クリエ 21 ピル 7F	TEL	019-623-9700	FAX	019-623-9701
仙台営業所	〒980-0802	宮城県仙台市青葉区二日町 14-15 アミ・グランデニ日町 4F	TEL	022-723-2031	FAX	022-723-2032
新潟営業所	〒940-0082	新潟県長岡市千歳 3-5-17 センザイビル 2F	TEL	0258-31-8320	FAX	0258-31-8321
宇都宮営業所	〒321-0953	栃木県宇都宮市東宿郷 5-1-16 ルーセントビル 3F	TEL	028-614-3651	FAX	028-614-3653
熊谷営業所	〒360-0847	埼玉県熊谷市籠原南1丁目312番地あかりビル 5F	TEL	048-530-6555	FAX	048-530-6556
茨城営業所	〒300-1207	茨城県牛久市ひたち野東 5-3-2 ひたち野うしく池田ビル 2F	TEL	029-830-8312	FAX	029-830-8313
多摩営業所	〒190-0023	東京都立川市柴崎町 3-14-2BOSEN ビル 2F	TEL	042-522-9881	FAX	042-522-9882
厚木営業所	〒243-0014	神奈川県厚木市旭町 1-10-6 シャンロック石井ビル 3F	TEL	046-226-7131	FAX	046-226-7133
長野営業所	〒390-0852	長野県松本市島立 943 ハーモネートビル 401	TEL	0263-40-3710	FAX	0263-40-3715
甲府営業所	〒400-0031	山梨県甲府市丸の内 2-12-1 ミサトビル 3 F	TEL	055-230-2626	FAX	055-230-2636
静岡営業所	₹424-0103	静岡県静岡市清水区尾羽 577-1	TEL	054-364-6293	FAX	054-364-2589
浜松営業所	〒430-0936	静岡県浜松市中区大工町 125 大発地所ピルディング 7F	TEL	053-459-1780	FAX	053-458-1318
豊田営業所	〒446-0056	愛知県安城市三河安城町 1-9-2 第二東祥ビル 3F	TEL	0566-71-1888	FAX	0566-71-1877
金沢営業所	〒920-0024	石川県金沢市西念 3-1-32 西清ビル A 棟 2F	TEL	076-234-3116	FAX	076-234-3107
京都営業所	〒612-8401	京都市伏見区深草下川原町 22-11 市川ビル 3 F	TEL	075-646-0757	FAX	075-646-0758
兵庫営業所	〒673-0898	兵庫県明石市樽屋町 8 番 34 号大同生命明石ビル 8F	TEL	078-913-6333	FAX	078-913-6339
岡山営業所	〒700-0973	岡山市北区下中野 311-114 OMOTO-ROOT BLD. 101	TEL	086-805-2611	FAX	086-244-6767
広島営業所	〒730-0802	広島市中区本川町 2-1-9 日宝本川町ビル 5F	TEL	082-532-1750	FAX	082-532-1751
松山営業所	〒790-0905	愛媛県松山市樽味 4-9-22 フォーレスト 21 1F	TEL	089-986-8562	FAX	089-986-8563
福岡営業所	〒812-0013	福岡市博多区博多駅東 3-13-21 エフビル WING 7F	TEL	092-415-4466	FAX	092-415-4467
大分出張所	₹870-0823	大分県大分市東大道 1-11-1 タンネンバウム Ⅲ 2F	TEL	097-543-7745	FAX	097-543-7746
熊本営業所	〒862-0954	熊本県熊本市中央区神水 1-38-33 幸山ビル 1F	TEL	096-386-5210	FAX	096-386-5112

お問い合せ先

アイエイアイ お客様センター エイト

(受付時間) 月~金 24 時間 (月7:00AM~金 翌朝7:00AM) 土、日、祝日 8:00AM~5:00PM (年末年始を除く)

3¹/₁ 0800-888-0088

FAX: 0800-888-0099 ホームページアドレス http://www.iai-robot.co.jp

IAI America, Inc.

Head Office: 2690 W. 237th Street, Torrance, CA 90505 TEL (310) 891-6015 FAX (310) 891-0815 Chicago Office: 1261 Hamilton Parkway, Itasca, IL 60143 TEL (630) 467-9900 FAX (630) 467-9912 Atlanta Office: 1220 Kennestone Circle, Suite 108, Marietta, GA 30066 TEL (678) 354-9470 FAX (678) 354-9471 website: www.intelligentactuator.com

IAI Industrieroboter GmbH

Ober der Röth 4, D-65824 Schwalbach am Taunus, Germany TEL 06196-88950 FAX 06196-889524

艾卫艾商贸 (上海) 有限公司

地址: 上海市虹桥路 808 号加华商务中心 A8 栋 303 室 邮编: 200030

电话: 021-6448-4753

传真: 021-6448-3992

E-mail: shanghai@iai-robot.com URL: http://www.iai-robot.com

管理番号: M0229-5A